




Canon Powershot SX30 IS LCD Panel Rear Cover Replacement

A guide for the replacement of the Back Panel that houses the LCD.

Written By: Ellis DeVoe

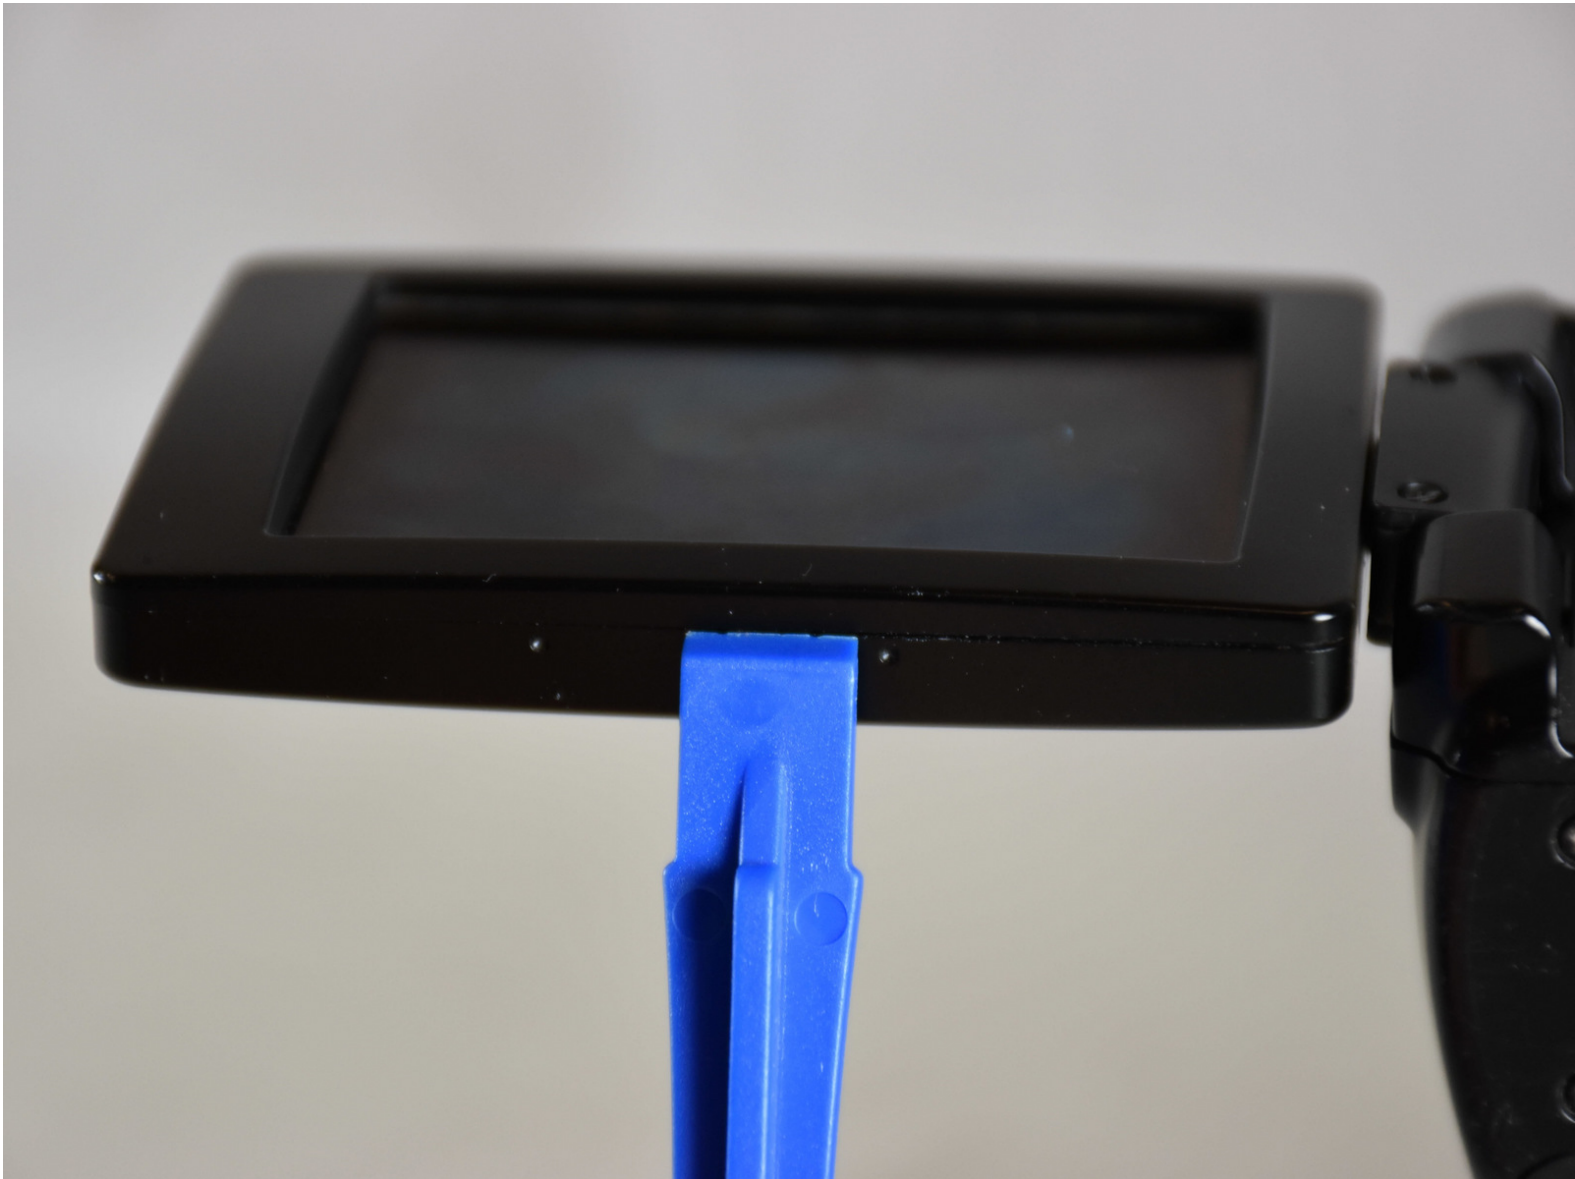



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — LCD Panel Rear Cover



- Turn the camera so the back of it is facing you.
- Pull the LCD screen towards you in order to open it,

Step 2




- Unscrew the two 3 mm screws shown on the left side of the LCD screen panel using a Phillips screwdriver.

Step 3



- Unscrew the two 3 mm screws shown on the right side of the LCD screen panel.

Step 4

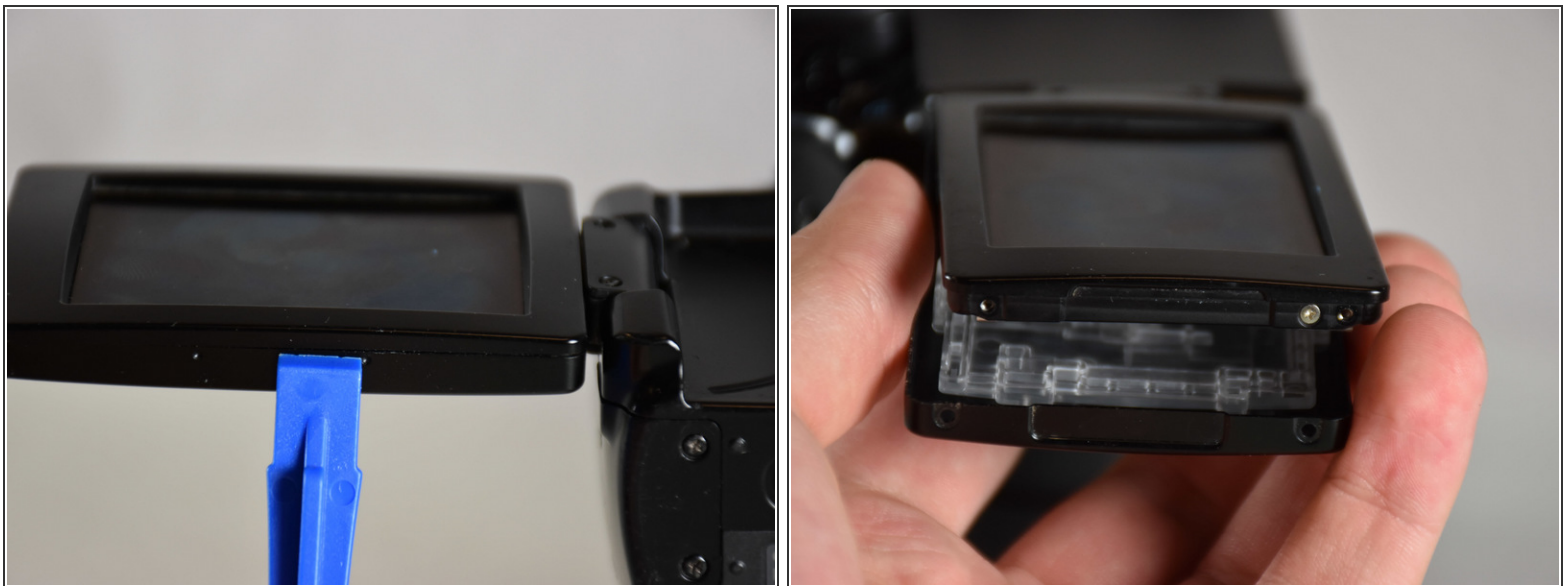

- Using the plastic opening tool, remove the rear case of the front LCD cover.

Step 5



- Pull off the back panel of the LCD screen and the plastic wire protector. Then replace the back panel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-29 06:23:05 AM.